

## **66264.232 Air Emission Standards**

The owner or operator shall manage all hazardous waste placed in a surface impoundment in accordance with the applicable requirements of Articles 28 and 28.5 this Chapter.