

## **66265.231 Air Emission Standards**

The owner or operator shall manage all hazardous waste placed in a surface impoundment in accordance with the applicable requirements of articles 28 and 28.5 of this chapter.